



# VALUE PACK KIT

# INSTRUCTIONS SHEET

Dear Valued Customer,

We thank you for choosing Com-Paint Value Pack Kit for Touchup of your valued possession. Finally, your ordered product is here in your hands.

Let us assure you that like thousands of our customers, you shall also find our product "Com-Paint Value Pack Kit" the most appropriate, excitingly useful, very economical and a good value for money.

We intend to guide you step by step so that you can be as skilful to use our product as the industrial sector and get the utmost satisfaction of feeling, the job well done.

Besides Com-Paint, you can choose from our wide variety of other car care products listed on our website, [www.com-paint.com](http://www.com-paint.com).

General Manager  
Aeroaids Corporation

## IMPORTANT

### FIRST CHECK THE COLOUR SHADE

Even though utmost care have been taken to provide you the right colour, still, we urge you to check the paint colour by spraying on a hidden area before you actually apply it on your vehicle.

Spray Com-Paint on a remote area say ..... on Car door sill followed by Com-Merge. Once it looks okay, then only proceed or else, speak to us.

Please scan the QR Code to see our paint shade testing video or visit our youtube channel at

[www.youtube.com/aeroaidscorporation](http://www.youtube.com/aeroaidscorporation)

Scan here to watch video



## STEP 1

**PREPARE SURFACE :** Wash scratched area, remove any loose rust, old paint, dirt, wax polish etc. and dry the area thoroughly. Before spray paint application, it is important that you mask the area of your car which is to be refinished. The use of masking tape with even newspaper will help prevent over spray from reaching other areas of the car.


### FOR SMALL & MINOR SCRATCHES

Wet emery pad EP - 2500 and the scratched surface. Gently rub back & forth on the scratch and across by applying a little even pressure of hand. Repeat until most of the scratch disappears. The area will become smooth and dull. When the surface area looks uniform, wipe dry with a clean cloth and now, it is ready for use of Com-Paint spray.

### FOR DEEP SCRATCHES & STONE CHIPS

In case of exposed metal surface or deep scratches, use Com-Fill paste to fill the scratch. Apply light coats with the help of metal applicator to spread evenly for a uniform fill of the scratch and level other surface imperfection. Immediately scrap off the excess with the metal applicator to level the surface and let it dry for 30 minutes.

## STEP 2

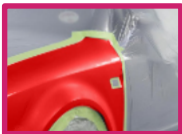

### MASKING & WET SANDING

Mask the area to avoid unwanted spray reaching the non-essential parts. Then, wet emery pad EP - 400 and the filled surface, gently rub by applying uniform pressure to level the area to be touched up with the adjoining surface. Wipe dry with a clean cloth and the area is ready for paint spray application.

**BETTER SURFACE PREPARATION GIVES BEST RESULTS!!**

Masking Tip: Mask a wider area like plastic parts, tyres, glass, lights etc. otherwise, you will get a strict masking paper line which will be difficult to remove and merge with the paint surface

## STEP 3

### TIME TO PAINT USING COM-PAINT


Shake the Can vigorously UNTIL AGITATOR BALL MOVES FREELY.

Hold Can straight 25 cms (12") from the surface. SPRAY IN STROKING MOTION TO AVOID DRIPPING.

Apply light coats rather a heavy one which might make paint to sag & run. Wait for 5 minutes between coats and cover the scratched area.


Wait for **10 minutes** for the Paint to dry which will become **Matt. (Dull)**

In case, the paint drips the first time, remove it with Cleaning Thinner and then re-touchup from more distance and build up coats

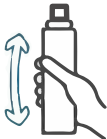

**SHAKE WELL  
BEFORE USE**

## STEP 4

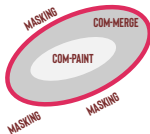

## APPLY COM-MERGE TO RETAIN GLOSS

Shake the Com-Merge - Finishing Solvent Can and spray on the painted area taking a **wider periphery** of the touched up area in order to let the paint overspray re-dissolve and merge with the surrounding surface.

Let the touched up area dry for **6 hrs.** for full curing of the paint film.

**A UNIFORM COAT OF COM-MERGE IS REQUIRED FOR GOOD GLOSS**

## STEP 5

**CONDITION : 1**  
If the surface is less rough,  
proceed to STEP 6

## WET SANDING (OPTIONAL)

Being environment in India a bit dusty, there might be a possibility that the surface would feel little rough to touch due to dust settlement.

**FOLLOW ON WITH STEPS 5 & 6, AFTER 6 HRS OF TOUCHUP**

**KEEP EMERY PAD &  
PAINT SURFACE  
HEAVILY WET  
WHILE SANDING**

**CONDITION : 2**  
If the surface on touch feels too rough and very less glossy, then, generously wet both the emery pad EP 2500 & the car surface and **very lightly** rub on the painted area till the surface feels smooth. Once done, follow on with step 6.

## STEP 6

## FINAL FINISH

To give a final finish, apply a small quantity of Com-Cut to the repair area. Take a clean cloth and start with a soft rubbing action to restore shine.

Wipe with a clean dry cloth.



**NOTE: IN CASE, YOU ARE NOT SATISFIED WITH THE FINAL RESULT AND CAN STILL SEE THE DEFECT, THE PROBLEM LIES IN SURFACE PREPARATION OR TOUCHUP APPLICATION.**

**DON'T WORRY, YOU CAN SIMPLY REMOVE THE TOUCHUP USING CLEANING THINNER OR ANY NC THINNER LOCALLY AVAILABLE AND FOLLOW ON WITH THE STEPS AGAIN.**

Disclaimer: Com-Paint VPK Colour shade is made using data available with us and not as per the physical condition of your Car Paint. Therefore, we cannot guarantee 100% Colour Match. Moreover, any touchup final outcome is very much dependent upon application method, current condition of Car Paint and hence, we do not undertake any Guarantee, Warranty, liability or damages caused by use of our product in any way. We urge you to again refer Terms and Conditions mentioned on our website prior to use of our product and then use it at your own risk.

#### ADDITIONAL TIPS :

- ★ CLEAN PAINT SPRAY BUTTON AFTER USE. If spray button clogs, rinse it in thinner and replace.
- ★ Do not use the product if the surface is hot to touch. Only use light pressure on the emery pads to remove excess paint. Excessive pressure may remove the surrounding paint also. Use masking tape or paper tape only, other type of tapes say.....a cello tape may cause paint damage on removal.
- ★ You can always remove the touchup paint using given Cleaning thinner or any locally available NC thinner, by rubbing it on the surface with a clean soft cloth.

#### CAUTION :

DO NOT PUNCTURE, INCINERATE OR STORE ABOVE 50° C. High temperature may cause Can bursting. Do not place Can on a radiator, stove, in direct sunlight or near other heat source. Use in well ventilated area, in shade & between (18°C - 30°C) temperatures for best spray results. If spray gets into eyes flush with water. If swallowed, do not induce vomiting, call physician. Keep out of reach of children.

## YOUR FEEDBACK HELPS

If you have any questions, comments or suggestions, please write to us at [sales@com-paint.com](mailto:sales@com-paint.com)

Or for any complaints, click "raise an issue" from your account or write to us at [support@com-paint.com](mailto:support@com-paint.com)

Our team will be more than happy to assist.

-  <https://www.facebook.com/compaint>
-  <https://www.youtube.com/aeroaidscorporation>
-  <https://www.instagram.com/compaint>
-  <https://www.linkedin.com/company/aeroaidscorp>

[www.com-paint.com](http://www.com-paint.com)



## Aeroaids Corporation

A - 6, G. T. Karnal Road Indl. Area, Delhi - 110033

Tel: 011 - 47374737

Email: [sales@com-paint.com](mailto:sales@com-paint.com)